
## **TSX QUICK REFERENCE GUIDE**

## **Tuesday Night Closing**

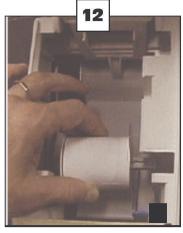

Rewind paper on the roll in the unit. Press the grey lever down and release. Snap the smoky brown cover down.




Unlock the VVPAT by pulling the blue lever towards you. Close the printer housing.



Pull the curved (hook) plastic piece to release the VVPAT.



Gently remove the VVPAT. Close the printer door and lock it. Disconnect the headset and power cord from the tablet. Remove the keypad from the mounting slot.

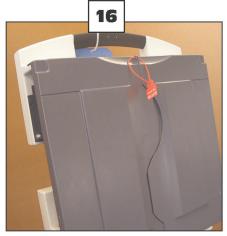

Close the privacy doors on the unit and seal them with a RED security seal.



Two people will turn the unit over onto a table. Collapse the inner legs by depressing both sets of safety pins and pushing the legs down.




Collapse outside legs by depressing the safety pins on each leg and pushing them down.



Carefully collapse the bracket by pushing down in the middle. Fold the outer legs in until the legs are even with the inner legs.



Collapse leg assembly by depressing safety pin on base support bar and pushing support bar down toward the base.

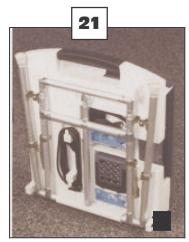

Replace power cord, keypad and headset on their respective storage brackets. Return unit to Voto cart.